




MDHHD Operation Guide

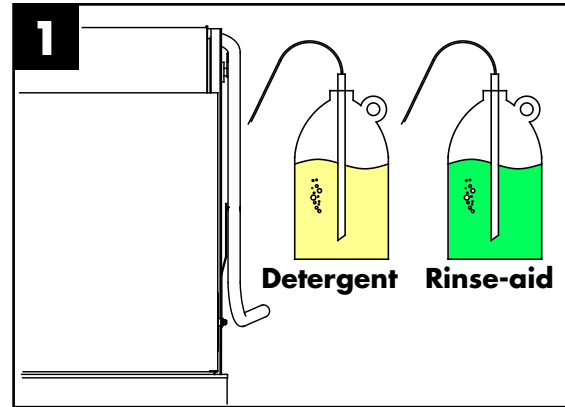


Check the chemical levels in the containers.

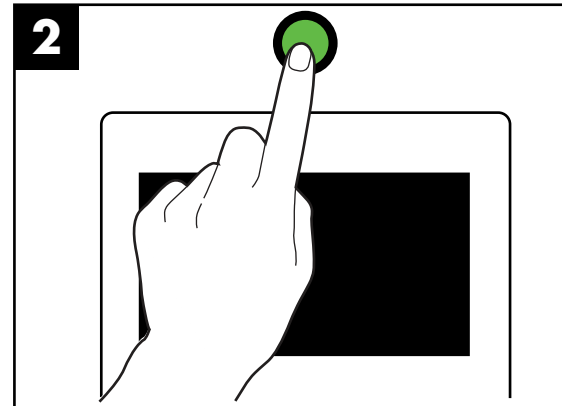


Close door & press the green power button.

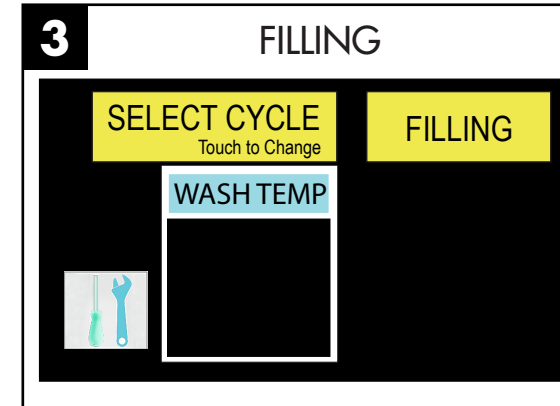


'FILLING' appears as the machine begins to fill automatically.

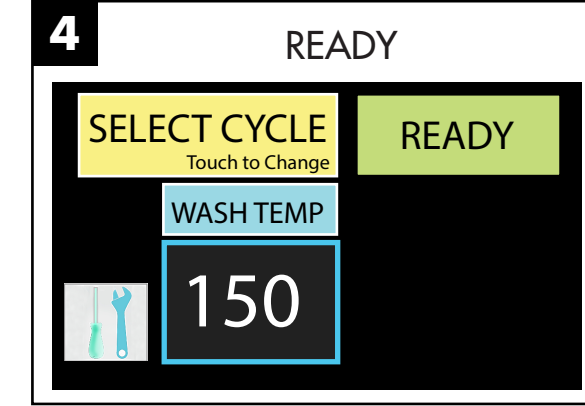


'READY' appears on the screen once it is ready to wash. Please allow machine to preheat 15-20 minutes prior to use.

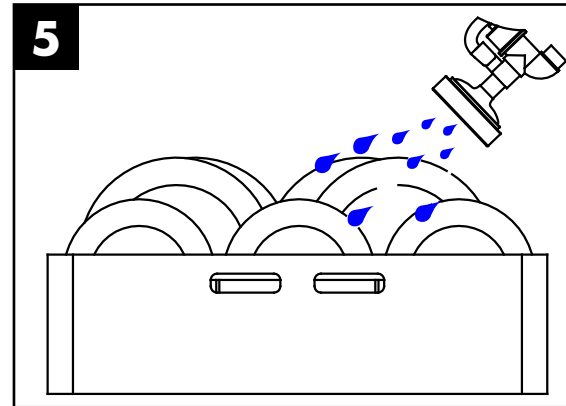


Prescrap and load wares into the machine. Wash one rack at a time.

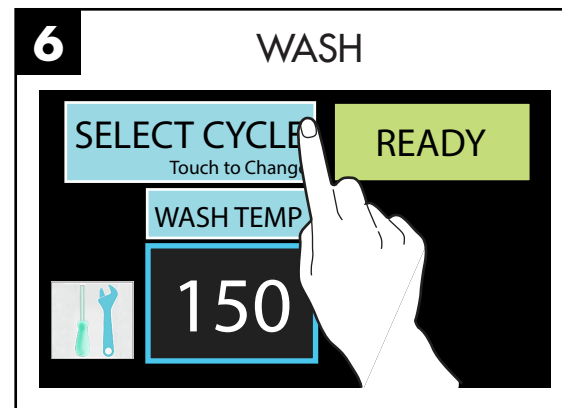

Close door and press 'SELECT CYCLE' for 1, 2, 4 or 6 minutes. The selected time cycle will begin.

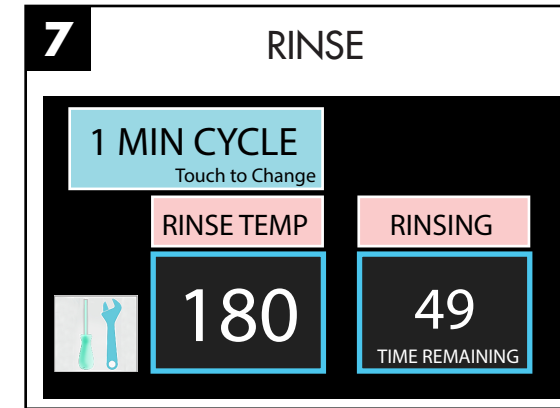


Monitor the final 'RINSE TEMP' to ensure it maintains a minimum of 180°F during the final rinse.

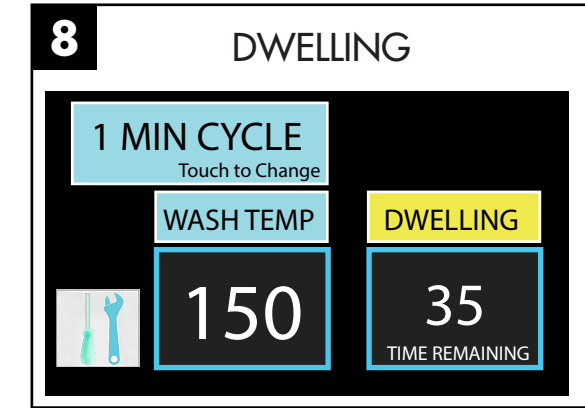

'DWELLING' appears after the final rinse cycle.



'READY' appears at the end of the cycle. Open the door and remove the clean wares.

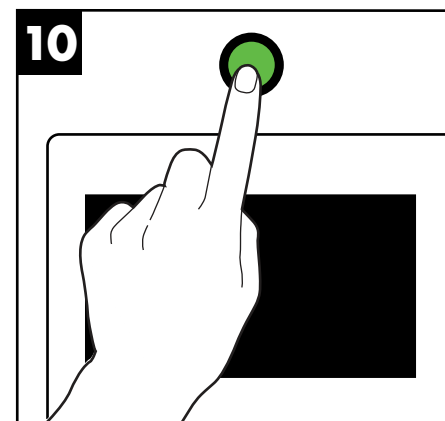

To Drain the Machine:

- Open the doors and remove wares from machine.
- Push the green power button.
- The display screen will blank out.
- The drain valve opens for 10 minutes to allow the machine to drain completely.
- The machine powers off.
- Pushing the power switch on and immediately off will initiate another 10 minute drain cycle.